6AKP 524 PRODUCT DESCRIPTION SHEET

AU

OVEN

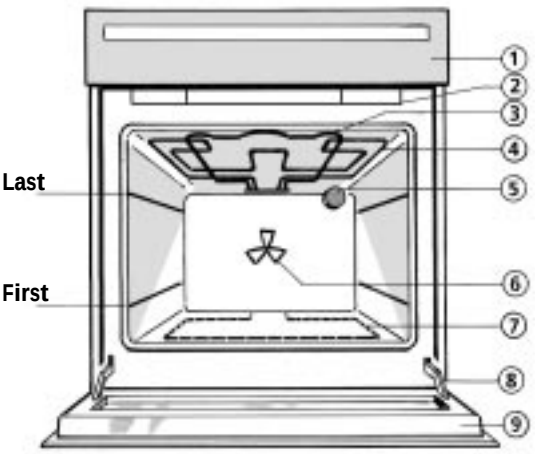

First...Last: Runner positions

1. Control panel
2. Cooling fan
3. Dual variable grill element (can be lowered)
4. Oven light
5. Circular heating element (not visible)
6. Fan
7. Oven door hinges
8. Oven door

Accessories:

- Grid
- Pan set

CONTROL PANEL

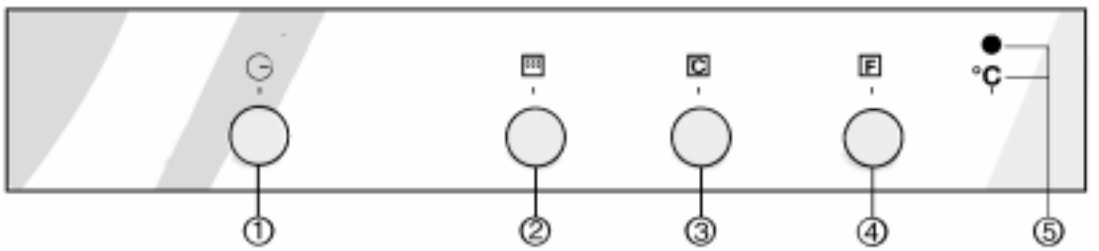

1. Mechanical automatic off
2. Dual variable grill knob
3. Oven thermostat knob
4. Oven functions knob
5. Thermostat indicator light

Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house.

Code N°: 4819 310 39186.

OVEN FUNCTIONS

0 Off

Oven light

DEFROST FUNCTION

Ideal for thawing frozen food to room temperature. The food should be inserted in the oven in its wrapping to prevent it from drying out.

FAN FUNCTION

Use the grill function when cooking food on more than one level (e.g.:fish, vegetables, pasta).

- Choose foods that require the same cooking temperature.
- Oven preheating is not necessary.
- Remove the cooked dish and, if necessary, continue cooking the other one for as long as required.

DUAL GRILL FUNCTION

This function has 2 positions: single and dual grill.

- Use the single grill position to grill small quantities of food.
- Use the dual grill position to grill large quantities of food.
- During cooking leave the oven door open.
- Before use, preheat the grill for 5 minutes approx.

SWITCHING THE OVEN ON

Turn the selector knob to the required symbol.
The oven light switches on.

- Turn the thermostat knob clockwise to the required temperature.

  The red thermostat indicator light switches on.

  When the required temperature is reached, the red thermostat indicator light switches off.
- To operate the grill turn the grill selector knob to symbol or .

End of cooking cycle:

- Return the knobs to the OFF position (0 - •)

PROGRAMMING COOKING TIME

1. Turn the knob fully clockwise.
2. Return the knob to the required cooking time.
3. When the preset cooking time has elapsed, the oven switches off.

- To use the oven without programming the cooking time, set the knob to .

Warning: If the programmer is on “0” the oven will not switch on: to switch on the oven either set the programmer knob to or set the required cooking time.